


operating instructions

inspiration C6m mk2

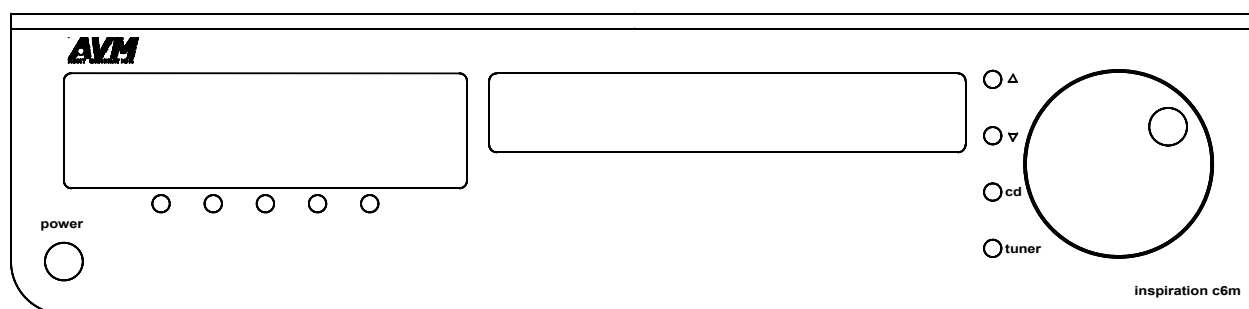

AVM
AUDIO VIDEO MANUFAKTUR

Dear customer,

thank You for purchasing this AVM product. You own now a versatile, excellent sounding hifi component. Before enjoying music, please read this manual carefully. After that You will know how to use Your new AVM component in the optimal way.

Sincerely Yours

Your AVM-Team

CAUTION : This unit contains a class 1 laser diode. Do not open. Invisible laser radiation can damage Your eyes.

Laser diode	Type	:	Ga-Al-As
	Wavelength	:	755 - 815 nm (@ 25 °C)
	Output power	:	0,7 mW max.

CLASS 1 LASER PRODUCT
LASER KLASSE 1

NOTE: Use only high quality cables for connection between the unit and the other components of Your hifi set. We recommend cable lengths under 50 cm to avoid interference which can affect the reception of radio and TV tuners.

Declaration of conformity (for EC only)

We herewith confirm, that the unit to which this manual belongs fulfills the EC rules necessary to obtain the sign



the necessary measurements were taken with positive results.

**AVM Next Generation Audio Technologies GmbH, Daimlerstraße 8, D-76316 Malsch, Germany
Website: www.avm-audio.com, E-mail: info@avm-audio.com**

Table of contents	page	page
Preamble	2	
Table of contents	3	
1. Basic information	4	4. Menu system 12
1.1 Mechanical construction	4	4.1 Playmode
1.2 Power supply	4	4.2 Repeat
1.3 Preamplifier	4	4.3 Random
1.4 Power amplifier	4	4.4 RDS-Display
1.5 CD-player, D/A-converter	5	4.5 Scanmode
1.5.1 Quantization noise	5	4.6 Mode
1.5.2 Reduction of jitter	5	4.7 Sensitivity
1.5.3 Filtering	6	4.8 Bandwidth
1.5.4 D/A-conversion	6	4.9 Tone
1.6 Tuner	6	4.10 Bass
2. Overview	7	4.11 Treble
2.1 Installation and cooling	8	4.12 SubBoost
2.2 Connection to mains	8	4.13 Loudness
2.3 Connecting analogue sources	8	4.14 Balance
2.4 Connecting a tape recorder	8	4.15 Name
2.5 Connecting a processor	8	4.16 Display
2.6 Connecting digital equipment	8	4.17 Processor
2.7 Connecting loudspeakers	8	4.18 Monitor
2.8 Connecting Tuner antenna	8	5. Remote control 14
3. Basic operation	9	6. Cleaning 15
3.1 Switching on / standby	9	7. If something doesn't work..... 15
3.2 Selecting the signal source	9	8. Technical data 16
3.3 Volume setting / MUTE	9	9. Appendix 17
3.4 Setting of input sensitivity	9	9.1 Expert setup
3.5 Tuner	10	9.2 Reset
3.5.1 Tuning	10	
3.5.2 Station memory	10	
3.6 CD-player	11	
3.6.1 Open / close	11	
3.6.2 Basic functions	11	
3.6.3 Programming a playlist	11	

1. Basic information about the C6m

1.1 Mechanical construction

The case is made of magnetic shielding steel and aluminum. The audio-connectors are all gold plated to minimize electrical losses and provide long lasting perfect contacts.

1.2 Power supply

A switch mode power supply delivers clean, hum-free electrical energy for the digital and analogue sections of D/A-converter and the preamplifier. All voltages are additionally buffered by large capacitors directly in the circuitry where they are needed.

The power amplifier has a separate power supply with a powerful toroidal transformer. This guarantees that independently of the demanded output power the power amplifier has no influence on the preamp or the D/A-converter.

1.3 Preamplifier section

The input circuits act extremely fast and use special semiconductors for exact and nearly noise free sound reproduction. SMD technique allows a very compact circuit layout and thus extremely short signal paths.

The volume control is done by highly precise integrated circuits. They allow setting in 0,5 dB steps and their channel balance is better than 0,05 dB. All this provides an absolutely precise, musical sound reproduction from lowest to highest listening levels.

If You wish to correct the frequency response at low listening levels or to have more or less treble or bass, You can activate the sound processor and set the frequency response. For linear reproduction the whole circuitry is removed out of the signal path by relays and has absolutely no influence.

1.4 Power amplifier

The power amplifier has it's own power supply. The powerful switch mode power supply can deliver over 400 Watts continuously and up to 450 Watts for a short period of time and supplies exclusively the energy for the poweramps.

The C6m uses for each channel a separate powerful and efficient digital class-D amplifier. These amplifiers have an analog feedback loop from output to input. This ensures a nearly load-independent frequency response and a very good damping factor.

Further highlights are very low output noise, low distortion and an extremely good efficiency. Even when delivering peak power levels to the speakers they deliver over 90% of the supplied energy to the speakers and thus produce nearly no heat.

1.5 CD player / D/A- converter

The inspiration C6m is equipped with upsampling circuitry and highly precise a/d converters. The theory of function will be described in the following text. If You are not interested in technical details, skip these chapters and simply listen to the music coming from the C6m. You will discover Your CD collection anew! And that is what we want to achieve. Because application of new technologies is not just a gimmick but offers audible and measurable advantages to the listener.

1.5.1 Quantization noise

The quantity of information on a CD is defined by the audio format of 44,1 kHz sampling rate and 16 bits of resolution. Additional information (i.e. higher resolution or bandwidth) cannot be created by any electronic circuitry playing back such a CD. It is a fact that conventional d-/a converter systems do not fully reproduce the given information. This has several reasons: Converting a digital signal to an analogue signal produces analogue noise. This is because the digital (quantized) values which represent the signal are discrete with a very fine – but nevertheless limited - resolution. Therefore exist slight deviations in respect to the analogue original signal which was continuous (means infinite resolution). These deviations are random and cause an additional noise to the original signal when it is converted from the digital domain to the analogue domain. This kind of noise is called quantization noise.

The characteristic of this noise is that it has an energy which depends on the resolution used to quantize the original signal and which is continuously spread over the whole range of the sampling frequency bandwidth. It is obvious that this noise can mask fine details of the originally recorded music.

For physical reasons it is not possible to avoid quantization noise. Also a reduction of the total noise energy is not possible because the noise has been created when the signal was recorded. An elegant solution of this problem is to increase sampling frequency when re-converting the signal from digital to analogue. The upsampling converter installed in the C6m can increase sampling frequency from 44,1 kHz up to 96 kHz.

When re-converting the upsampled signal the upsampling converter produces the same amount of noise energy as a conventional converter.

The difference is that the noise energy is spread over a much broader frequency band. So the part of noise energy which is within the audible spectrum decreases. You can imagine that like if You have a certain volume of fluid in a small glass. If You fill the fluid in a glass which has much more diameter the quantity of fluid doesn't change but height of the fluid surface will be lower than in the small glass. In the same way the increasing of sampling frequency (called upsampling) broadens the noise bandwidth and reduces the noise level. Most of the noise energy now is located in a frequency region beyond the audible range and can easily be filtered out without affecting the music signal.

1.5.2 Reduction of jitter

Jitter means slight, varying deviations in the sampling frequency of a digital signal. These deviations come from deviations in speed of the CD when it is played back (a natural effect, which can be reduced by mechanical means, but never fully eliminated). They can additionally come from electronic circuits through which the signal must pass. When such a signal is converted to analogue the samples arrive sometimes a little bit too early, sometimes a little bit too late at the DAC. This leads to modulations in the analogue signal which can affect the quality of the reproduced music. The spatial image is not precise, You cannot exactly locate the instruments, the sound is a bit roughened.

The solution for this problem is upsampling. Upsampling does not only mean multiplying of sampling frequency by a fixed factor like it is done by the oversampling technique used in former times. Upsampling technique is more similar to recording the original digital signal anew with a different sampling frequency (re-clocking). That means that the sampling frequency of the original signal and the upsampled signal are fully independent of each other. Thus if the upsampling converter has a stable jitter free clock the upsampled signal contains less jitter than the original digital signal.

The musical advantages of re-clocking are the second reason why the AVM inspiration C6m is equipped with a brand-new upsampling circuitry and an additional stable oscillator circuit.

1.5.3 Filtering

If a digital signal is converted to analogue the analogue signal contains not only the original signal, but as well it's mirror image which lies in the frequency domain beyond one half of the sampling frequency. This mirror image (aliasing) can cause unwanted interference with the original signal and thus must be filtered out before passing the signal to the amplifier.

If the original sampling rate of 44,1 kHz is used the filter slope must be positioned somewhat above 20 kHz and has to be very sharp in order to let the audio signal pass and to eliminate the aliasing components. Such filters cause a large phase deviation at the end of the pass band and have often also amplitude deviations. This leads to a harsh reproduction of music and can also affect the localization of solo instruments and voices.

Upsampling to higher rates makes it possible to set the filter frequency far out of the audio signal range. For example at 96 kHz sampling rate the filter must take effect at 48 kHz. In this frequency region no music signal is present. Thus the filter can theoretically not affect musical reproduction.

1.5.4 Digital- / analogue conversion

The C6m uses highly precise 24-bit differential converters to reproduce the analogue signal out of the digital data. Two converters on the same chip are used to output balanced signals. These signals are fed into a differential amplifier. The difference between the signals is twice the audio signal (because one of the signals is inverted) and the difference of the inaccuracies of the converters. As the two converters are on the same chip, their inaccuracy is nearly the same and thus also nearly eliminated by the differential amplifier.

The second advantage of this differential technique is that the (very low) individual noise coming from the converters is reduced by 3 dB.

The result is a clearly audible advantage in dynamic of the music signal and an audibly improved reproduction of the finest details.

1.6 FM-Tuner

The tuner of the C6m can be adapted to different reception situations. You can set bandwidth, and sensitivity values in order to achieve optimal sound quality from aerial antenna as well as from cable. With it's high sensitivity the tuner can also work with a simple indoor antenna.

The stereo decoder offers high channel separation as well as very low noise.


The RDS section (audio data system, not available in all countries) is processor controlled and shows You station names and texts with additional information about the program You are listening to.

The station memory allows You to store up to 50 stations. It stores not only their frequency, but also the individual setting of sensitivity, bandwidth and mode (mono/stereo).

2. inspiration C6m overview


The numbers in the drawings below mark the control elements. They refer to the numbers in the text, where the operation of the unit is described.

Front panel

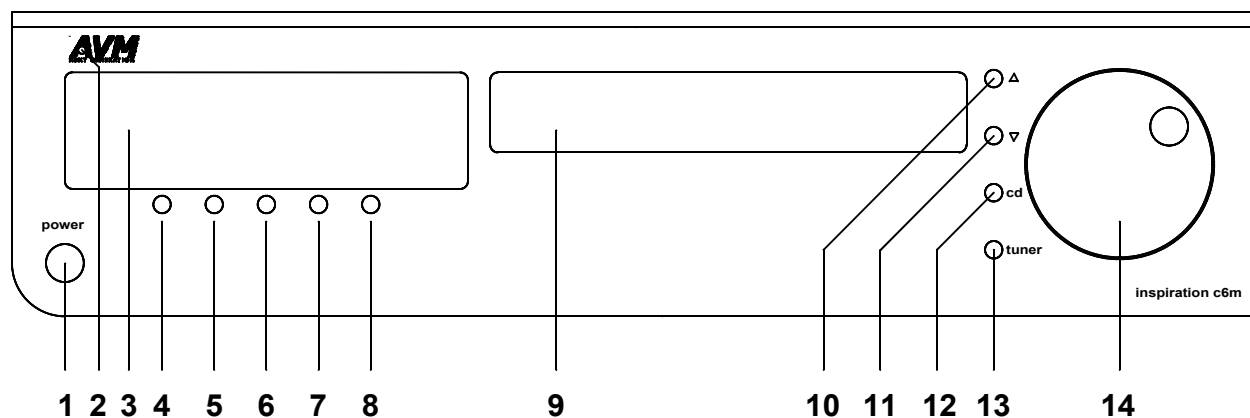

- | | |
|-------------------------------------|-------------------------|
| 1 Power button (on / off) | 9 CD-Loader |
| 2 Control LED | 10 Source selector UP |
| 3 Display | 11 Source selector DOWN |
| 4 Multifunctional button (soft key) | 12 Selector CD |
| 5 Multifunctional button (soft key) | 13 Selector TUNER |
| 6 Multifunctional button (soft key) | 14 Volume knob |
| 7 Multifunctional button (soft key) | |
| 8 Multifunctional button (soft key) | |

Rear panel

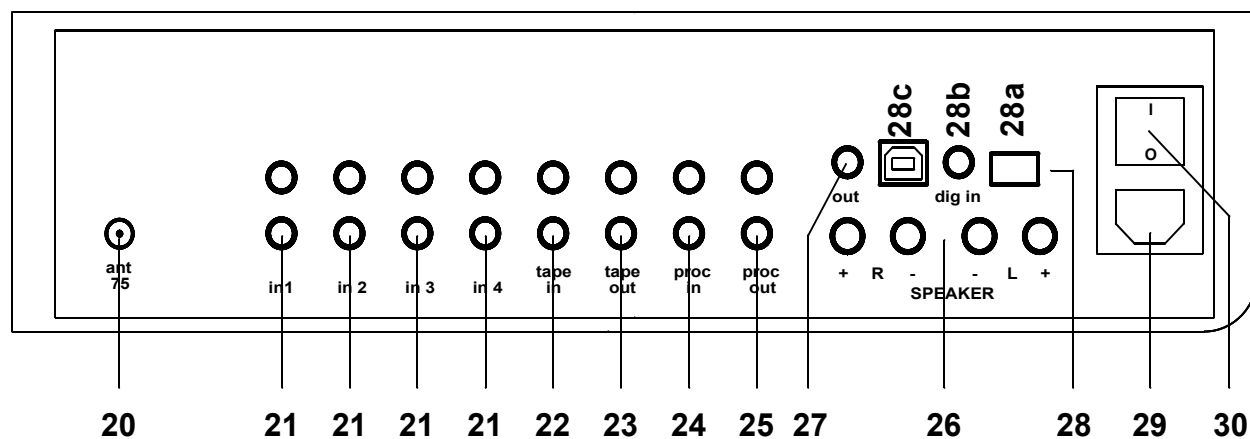

- | | |
|----------------------|-----------------------------------|
| 20 Antenna socket | 27 Digital output |
| 21 Analogue inputs | 28 Digital inputs |
| 22 Tape input | 28a: optical, 28b: coax, 28c: USB |
| 23 Record output | |
| 24 Processor input | 29 Mains connector |
| 25 Processor output | 30 Mains switch |
| 26 Speaker terminals | |

2.1 Installation and cooling

The inspiration C6m can become hot depending on demanded output power and environmental temperature. Therefore it is important, that the cooling air can flow unhinderedly into the air inlet in the bottom and flow out through the holes in the rear panel. Direct exposure to sunlight is not recommended because this will heat up the unit.

2.2 Connection to mains

Connect the amplifier to the mains outlet by using the power cord which is (in some countries) delivered together with the unit. Make sure that mains voltage is according to the value printed on the rear panel of the amp (near mains connector). Let the unit be switched off until all audio connections are made.

2.3 Connecting the analogue signal sources

Connect the outputs of Your additional signal sources to the inputs (21). The upper row is for left channel, the lower row is for right channel. The inputs tape (22) and processor (24) provide special functions, which are described below.

2.4 Connecting a tape recorder

Connect the recorder's output to the inputs tape in (22). The inputs of the recorder must be connected to the outputs tape out (23).

2.5 Connecting processors / equalizers

Connect the processor's output to the inputs proc in (24). The inputs of the processor must be connected to the outputs proc out (25).

2.6 Connecting digital equipment

Inputs SPDIF/Coax

Connect the outputs of Your digital sources to the inputs dig in (28a, 28b).

Note: The SPDIF and Coax input are internally paralleled and can only be used alternatively.

USB connector

Use a suitable USB cable and connect the C6m's USB input (28c) to your computer. PC working with WINDOWS XP or higher as well as most Apple computers recognize the A3NG's USB input automatically. Installation of a special driver software is normally not necessary.

To play music stored on your computer you must set it's output to USB and the volume to maximum. These settings and how to create playlists, how to play certain music titles depend on the software you use. Please refer to the corresponding software manual.

Digital out

The input of a digital recorder must be connected to the output dig out (27). The signal on the digital outputs depends the selected source (build in CD, dig in).

2.7 Connecting the loudspeakers

Connect the speakers to the speaker terminals (26). Use only good speaker cables with sufficient diameter. Make sure, that the red terminals are connected to the red or " + " terminals of the speakers and the black terminals to the black or " - " terminals of the speakers.

2.8 Tuner antenna

Connect the Antenna cable to the antenna socket (20) of the C6m.

3. Basic operation

In case the C6m was not connected to mains a self test will be performed when it is switched on by mains switch (30) for the first time. The unit checks it's configuration and if all installed components work properly. The procedure is shown in the display.

3.1 Switching on / standby

Using the button power (1) You can switch between on (operate) and stand by. In the on state the display (3) and the LED (2) light up. In stand by mode the display (3) is off and the LED glows to indicate that the unit is still connected to mains.

CAUTION: When switched to stand by the unit is still connected to mains. In case of thunderstorm or if You leave the house for a longer time we recommend that You switch the amplifier off by using the mains switch (30) or pull the mains plug.

3.2 Selecting the signal source

Use the source selectors (10 - 13) to select a signal source. The selected source is indicated in the display (3).

3.3 Volume setting / MUTE

Use the rotary encoder (14) to set the desired volume. Depending on rotating speed the volume increases / decreases in 0,5 dB steps (slow) or 3 dB steps (fast). The actual setting is shown in the display (3).

3.4 Setting of input sensitivity

The level of signal sources differs often by several dB. So You recognize a step in volume, when switching between two inputs. It is also possible, that a source which is too loud overdrives the input and causes distortion. With the sensitivity setting menu You can avoid this. The sensitivity of each input can be set between – 12.5 dB and + 12.5 dB.

NOTE: The input levels of internal CD player, digital inputs and tuner are already set to equal values and cannot be changed.

Select an input with the input selector (16) and chose a convenient volume level. Now press the button MENU (under the display) for more than 2 seconds. The display (3) now shows "level". In the upper line it shows the name of the actual source and on the right side the actual input sensitivity (factory setting: "0,0"). Set the sensitivity using the buttons ◀ **VALUE** ▶ (7, 8). Switching between the several sources allows You to compare and adjust the levels. If You are ready, press EXIT (5) and Your settings are stored.

3.5 Tuner (if built in)

The basic functions of the tuner can be accessed by the buttons right under the display (4 – 8). For more sophisticated functions see chapter 4.4 to 4.8

3.5.1 Tuning

Depending on the selected mode (manual / auto) the most right buttons (7, 8) under the display (3) are named ◀ **AUT** ▶ or ◀ **MAN** ▶. In AUT-mode a tip on one of the buttons lets the tuner automatically seek the next upper or lower station. In MAN mode the frequency changes in 50 kHz-steps as long as the button is pressed. In this case the tuning indicator shown in the display (3) helps You to tune correctly to the desired station. If tuning is correct it will show "tuned".

NOTE: To optimize the sound quality You can use the functions **mode**, **sensitivity** and **bandwidth**, which are described later on in chapter 4.4 to 4.8

3.5.2 Station memory

If You want to store a certain station in the memory, press the button MENU (6) under the display (3) for more than 2 seconds. The display shows now on the left side the number of the actual memory position. It can be changed by pressing the buttons below (4, 5). On the right side You can see the frequency of the station which is actually stored in this memory position (if none: "unused") and below the frequency of the new station to be stored.

Press SAVE to store the actual station, EXIT to cancel the procedure or DELETE if You want to delete the stored station.

NOTE: The station memory allows You to store up to 50 stations. It stores not only their frequency, but also the individual setting of sensitivity, bandwidth and mode (mono/stereo).

◀ **PGM** ▶ (4, 5) selects the stations stored in the memory. A short tip switches to the next / previous station. Holding the button down scans automatically up / down. The number of the actual station is shown in the display.

3.6 CD player

The basic functions of the CD player can be accessed by the buttons right under the display (4 – 8). For more sophisticated functions see chapter 4.1 to 4.3

3.6.1 Open / close

To open the tray press the most right button (8) under the display (3). Closing is done by pressing this button again or slightly pushing the tray (9). After the tray has closed the player reads the directory of the inserted disc. The display shows the actual title / total number of titles, the player status (PLAY / STOP / PAUSE) and the actual playing time. If no disc is inserted it will show “no disc”.

TIP: Using the buttons ◀◀ or ▶▶ (4, 5) You can select a certain title before closing the tray. A short tip on the button ▶ (7) will close the tray and the player starts playing the selected title.

3.6.2 Basic functions (SKIP / SEARCH, PLAY, PAUSE, STOP)

While the player is stopped the buttons ◀◀ or ▶▶ (4, 5) select the title. A short tip switches to the next / previous title. Holding the button down scans automatically up / down. The number of the actual title is shown in the display.

Pressing ▶ (7) starts the player. While playing the button changes its function to || (pause).

When the player is playing a short tip on the buttons ◀◀ or ▶▶ (4, 5) selects the previous / next title. Holding down the buttons starts the rewind / fast forward function. Rewind / fast forward stops automatically when the begin / end of the actual title is reached.

While the player is playing the most right button (8) under the display shows the STOP-symbol. When the player is stopped this button changes its function to OPEN / CLOSE.

3.6.3 Programming an individual playlist

If a disc is inside the player You can program Your individual playing sequence as follows: Hold the button MENU (6) down for more than 2 seconds to enter the playlist-menu. Pressing the buttons ◀ POS ▶ (4, 5) allows You to select the position in the playlist. The display shows above these buttons the actual playlist-position / total number of programmed titles (POS = x/xx) and the total programmed playing time (SUM = xx:xx). The buttons ◀ TRK ▶ (7, 8) select the title which is to be played. The display shows above these buttons the track number (TRCK = x) and below the playing time of the selected title(LEN = xx:xx).

EXAMPLE:

The CD inside the player contains 15 titles. You want to play only titles 7, 3 and 8.

- Press MENU (6) for more than 2 seconds. The display now shows “POS 1/1”. In this moment the position cannot be changed, because nothing is yet programmed.
- Select title 7 using the buttons ◀ TRK ▶ (7, 8). Display shows “TRK = 7”
- Select position 2 using the buttons ◀ POS ▶ (4, 5) “POS = 2/2”
- Select title 3 using the buttons ◀ TRK ▶ (7, 8). Display shows “TRK = 3”
- Select position 3 using the buttons ◀ POS ▶ (4, 5) “POS = 3/3”
- Select title 8 using the buttons ◀ TRK ▶ (7, 8). Display shows “TRK = 8”
- Now press EXIT (6) to finish the programming.

The programmed sequence is stored until You open the tray and insert a new CD. Before playing You can choose if You wish to play the programmed sequence or the CD as it is (see chapter 4.1).

You can also change the programmed sequence later on by pressing the MENU button (6) for more than 2 seconds. After entering the program-menu select the position to be changed using the buttons ◀ POS ▶ (4, 5) and the new title using the buttons ◀ TRK ▶ (7, 8). When the track number below 1 is selected the display shows “--” and You can remove the position completely by pressing the button DEL (4). When the desired changes have been made press EXIT (6).

4. Menu system

The inspiration C6m offers a lot of custom specific settings in its menu system. To enter the menu just tip on the button MENU (6). The button now changes to EXIT. A second tip on this button leads You to the normal operating mode. When the menu system is active You can select the desired function using the parameter-buttons ◀ PARM ▶ (4, 5). The setting is done using the buttons ◀ VALUE ▶ (7, 8).

Depending on the actual source the menu system offers the following settings:

4.1 Playmode (CD must be selected as source)

In case You have programmed a playlist You can choose if the titles are played according to the playlist ("program") or "as CD".

4.2 Repeat (CD must be selected as source)

Choose repeat mode: "one" (actual title), "all" (whole CD or programmed sequence), "off".

4.3 Random (CD must be selected as source)

Titles are played in random sequence.

4.4 RDS-Display (tuner must be selected as source)

Choose if station name ("station") or RDS text ("text") is displayed.

4.5 Scanmode (tuner must be selected as source)

Set tuning mode between "auto" or "manual". (See also 3.5.1 tuning)

4.6 Mode (tuner must be selected as source)

Set tuner to mono or stereo to obtain best sound.

4.7 Sensitivity (tuner must be selected as source)

Choose between "local" (in case the tuner operates from a cable) and "distant" (if operated from antenna)

4.8 Bandwidth (tuner must be selected as source)

Select bandwidth "narrow" / "wide" for best reception.

4.9 Tone

Set tone control to "bypass" (= linear) or "active". In case the tone control is activated a note symbol is shown in the display (3).

4.10 Bass

Set bass level between -12.5 and + 12.5.

4.11 Treble

Set treble level between -12.5 and + 12.5.

4.12 SubBoost

If You use small speakers You can switch bass boost "on" to enhance the reproduction of low frequency range. Subsonic frequencies will be suppressed in order not to damage the speakers.

4.13 Loudness

If You listen to music at low levels, You often recognize that bass and treble reproduction are weak. This is because the human ear is not sensitive to bass and treble at low sound levels. To compensate this You can use the parametric loudness function of the C6m. This function will increase bass and treble levels when You decrease the volume. When the volume is increased the frequency response will be more and more flat and remain linear at high volume levels. In order to obtain best results You have to proceed in the following way:

Set the amplifier to a moderate volume level. Using the buttons ◀ **VALUE** ▶ (7, 8) choose in the loudness menu a curve (0 to 7) which gives best sound impression and exit the menu (button EXIT (6)).

NOTE: The loudness function selects automatically the correct curve depending on actual volume setting. So if You change volume a different curve than previously selected may be shown in the loudness menu. This is not a malfunction.

4.14 Balance

Set the balance between right and left channel for optimal stereo image.

4.15 Name

You can individually set the names (max. 8 characters) of the different sources shown in the display (3). Enter the "NAME" menu and press one of the buttons ◀ **VALUE** ▶ (7, 8). Now You are in the edit mode. The source is selected using the program selector (16). The actual character-position can be selected using the buttons ◀ **POS** ▶ (4, 5). The marked character (underlined) can be changed using the buttons ◀ **VALUE** ▶ (7, 8).

When You are ready, simply press EXIT (6). and the new names are stored.

4.16 Display

Sets the display brightness between 1 and 8.

NOTE: Brightness levels over 5 can lead to a burn in of the display. Therefore we recommend that the unit shall not be operated permanently (more than 2 hours a day) with brightness levels over 5.

4.17 Processor

Switches processor function "on" / "off". If the processor is activated, it influences the signals on the speaker outputs. The signals on record out are not affected.

4.18 Monitor

Switches tape monitor function "on" / "off". If the monitor is activated, the display (3) shows a tape symbol.

NOTE: The C6m has an "intelligent" monitor function. If the tape input is selected as source the monitor function is cancelled to avoid feedback from the tape recorder.


To access the monitor function quickly, press the MENU button (6) and then the button ◀ **PARM.** (4). Now You can switch the monitor function on and off using the buttons ◀ **VALUE** ▶ (7, 8).

5. Remote control

The main functions of the C6m can be controlled by the RC3: ON/OFF, Volume control, source select, Station select (only for stations stored in memory, see 3.5.2 Station memory), PLAY/PAUSE, STOP, SKIP.

The RC3 works up to distances of 7 meters. For best function point with the RC3 to the front panel of your hi-fi set. If the hi-fi set doesn't react or reacts only over short distances, the batteries of the RC3 must be changed.

Changing batteries

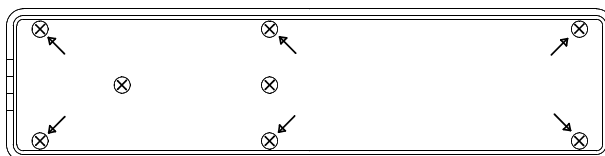

Bottom view

Unscrew the 6 marked screws (CAUTION, do NOT unscrew the 2 unmarked screws in the middle). Take the bottom plate with the mounted pcb out. Remove the worn batteries and replace them with two new batteries (type CR2032, 3V Lithium cells). Make sure that polarity is correct (the "+" sign must be on top). Insert the bottom plate and screw it tight.

6. Cleaning

Use a soft cloth and normal glass cleansing fluid.

CAUTION: Make sure that no fluid comes into the unit. Do not use scouring cleaners. They may damage the surface.

7. If something doesn't work.....

Some putative defects are often caused by mistakes in operation. Sometimes other units connected to the amplifier can cause problems. Therefore please read the following tips before You consult Your dealer or us.

1. Amplifier is muted

- a) Mute function is active, press button MUTE (vol/pol>) on remote control or increase volume using the rotary encoder (14)
- b) MONITOR function is activated. Switch monitor off.
- c) PROCESSOR function is activated. Switch processor off.
- d) Inadvertent switching to standby by remote control. Press power button (1). If the LED indicator and display do not light up a fuse can be blown due to overvoltage (thunderstorm). Please contact Your dealer.

2. Amplifier switches off during normal operation

This can happen if the temperature inside the unit becomes too high. In this case the amplifier switches off and the display shows “**overheat**”. Switch the unit off and let it cool down for five minutes.

If the Display shows “**overload**” please check if there is a short circuit in the speaker cables. Switch the unit off by pressing power button (1) remove the short circuit and switch again on.

3. Hum

- a) Hum while playing records: Make sure that the chassis of Your record player is properly grounded.

4. Infrared remote control doesn't work

- a) Check the batteries of Your remote control transmitter
- b) Point with the remote control transmitter directly to the unit.

8. Technical data inspiration C6m

Amplifier

Sensitivity (25 W/4 Ohm)	0,033 – 0,56 V (adjustable)
Input impedance	10 kOhms
S/N	96 dB (A)
Frequency response	< 5 Hz - > 50 kHz
THD (25 W/4 Ohm)	< 0,1%
Damping factor	>100
Output power	110 W (8 Ohms) / 200 W (4 Ohms)

Tuner (if built in)

Frequency range	87,5 – 108,0 MHz
Tuning step	50 kHz
Sensitivity (mono / stereo)	1,5 µV / 50 µV
S/N ratio (mono / stereo)	73 / 68 dB(A)
THD+N mono / stereo)	0,1% / 0,3%
Channel separation	55 dB

CD / D/A converter(C6m only)

Formats	CD-Audio, CDR
Upsampling	96 kHz / 24 Bit
Frequency response	20 Hz – 20 kHz
Deemphasis	automatically
Input format dig in opt	SPDIF, linear PCM 33 kHz – 96 kHz / 16 – 24 bits
Input format dig in coax	SPDIF, linear PCM 33 kHz – 96 kHz / 16 – 24 bits
USB input	up to 48 kHz / 16 bits
Input impedance dig in coax	75 Ohms
Input level dig in coax	according to IEC 908
Digital-outputs (S/PDIF, TOSLINK)	44,1 kHz / 16 Bit or input format

General

Standby	1 W
max.	450 W
Power supply	AC 230V / 50-60Hz
(Upon request	AC 115 V / 50-60 Hz)
Dimensions (W x H x D)	330 x 90 x 345 mm
Weight	8 kg

issued: 6/2010. Changes reserved without notice

9 Appendix

9.1 Expert setup

Several settings can be done in the expert setup. After having done that you can block these settings in the normal menu. This simplifies the operation of the c6m for the enduser.

To access the expert setup switch the unit to standby (power button (1)). Then press and hold the most right key under the display (8). While holding that key switch the unit on (power button (1)). The display now will show a count down "expert setup in 5, 4, 3, 2, 1 sec". After that count down release the button (8) and the unit is in expert setup mode. If you wish to exit the setup press "EXIT" (6).

When the expert setup is active You can select the desired function using the parameter-buttons ◀ **PARM** ▶ (4, 5). The setting is done using the buttons ◀ **VALUE** ▶ (7, 8).

The display (3) shows in the upper line the active setup point (for example "EXPERT 4/28") and below the possible setting.

EXPERT 1/27:	Deactivate the processor menu (4.17)
EXPERT 2/27:	Deactivate the monitor menu (4.18)
EXPERT 3/27:	Deactivate the sound setting menu (4.9 - 4.12)
EXPERT 4/27:	Deactivate the balance menu (4.14)
EXPERT 5/27:	Deactivate the source name menu (4.15)
EXPERT 6/27:	Deactivate the level menu (3.4)
EXPERT 7/27:	Deactivate the programming function of the CD player (3.6.3)
EXPERT 8/27:	Deactivate the display menu (4.16)
EXPERT 9/27:	Set time vor VOLUME-display (display time while tuner or CD is on)
EXPERT 10/27:	Deactivate / activate the AUTO PLAY function.
EXPERT 11/27:	Deactivate the tuner mono/stereo menu (4.6)
EXPERT 12/27:	Deactivate the tuner sensitivity/bandwidth menu (4.7, 4.8)
EXPERT 13/27:	Deactivate the station memory menu (3.5.2)
EXPERT 14/27 - 15/27:	Setting of capture level for auto tuning (mono, stereo)
EXPERT 16/27 - 22/27:	Deactivate unused inputs. The unit will then skip these inputs when the source Selector is used.
EXPERT 23/27:	"yes" enables individual tone control per source.
EXPERT 24/27 - 26/27:	If tone per source is enabled you can set the tone control individually for each input. If not you can set the tone controls generally for all inputs. Use the input selector (3) to select sources. And the volume knob to set volume.

9.2 Reset

This function cancels all settings and makes the unit return to default settings.

To perform the reset switch the unit to standby (power button (1)). Then press and hold the middle key under the display (6). While holding that key switch the unit on (power button (1)). The display now will show a count down "reset in 5, 4, 3, 2, 1 sec". After that count down release the button (6) and the unit performs the reset. If you release the button (6) earlier the reset is cancelled.